




Dell Dimension 4600 RAM Replacement

This guide covers the removal of the RAM modules from your computer.

Written By: Daniel Crawford

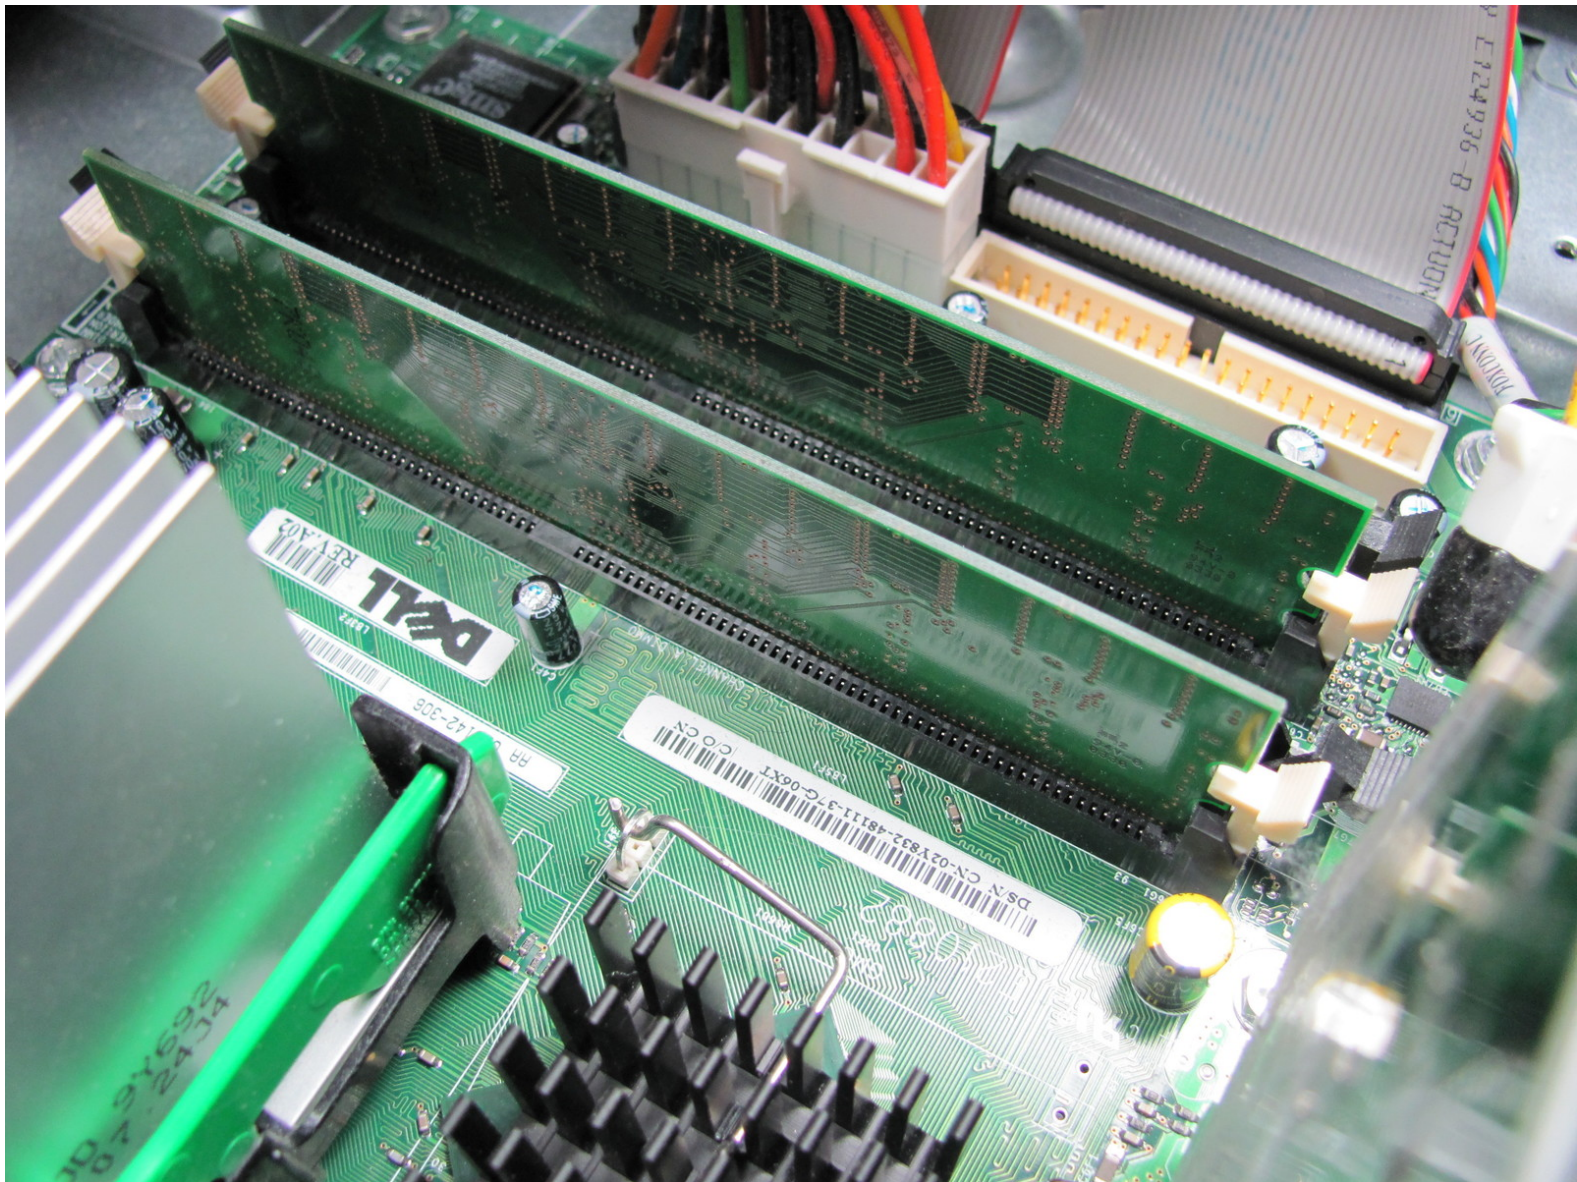

INTRODUCTION

Use this guide to replace the RAM in your Dell Dimension 4600.



PARTS:

- [PC3200 1 GB RAM Chip \(Desktop\)](#) (1)
-

Step 1 — Side Panel



- Locate the case cover latch on the back of the computer.

Step 2



- Using your index finger, slide and hold the cover latch down.
- While holding the latch down, place your other hand flat on the side of the case and firmly shift the side panel to the left until it disengages.

Step 3




- Grab the edge of the panel and slide it away from the case until it is removed.



Step 4 — RAM



- ① Lay the computer flat on its side so that you are looking down on all of the components.
- Locate the RAM modules on the motherboard.

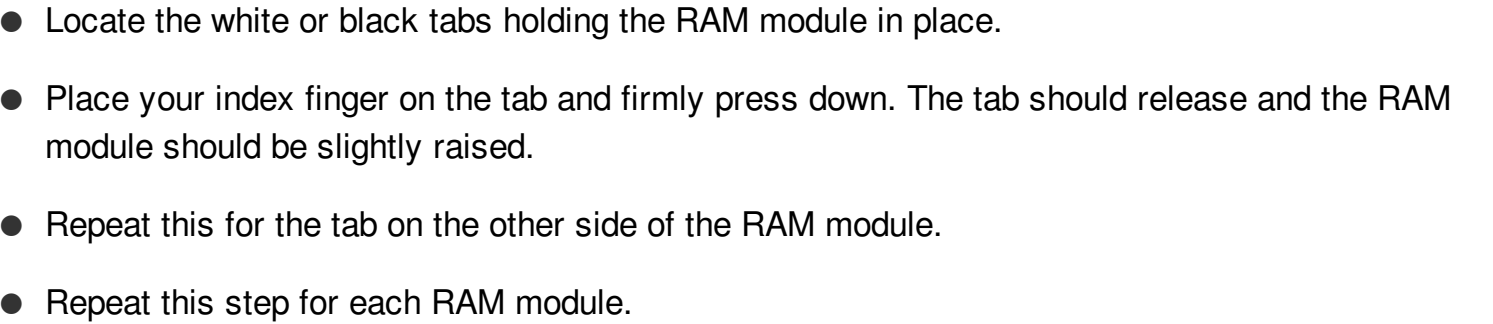

Step 6

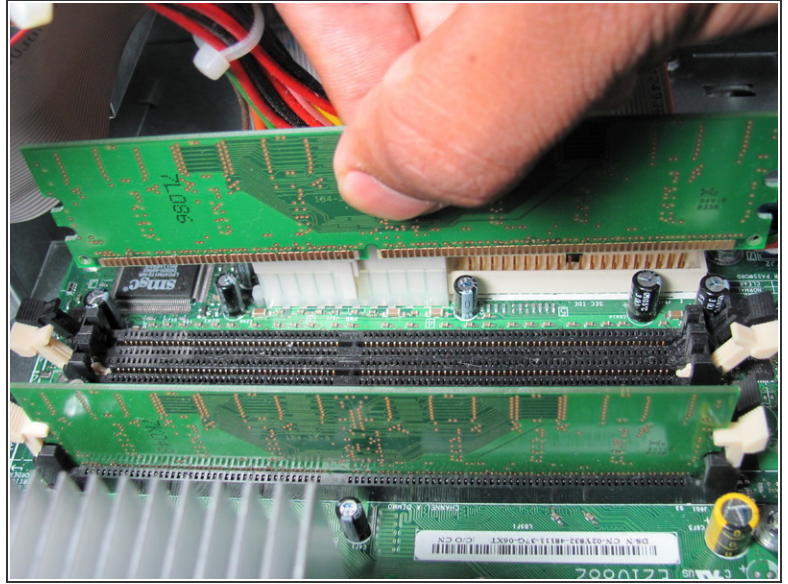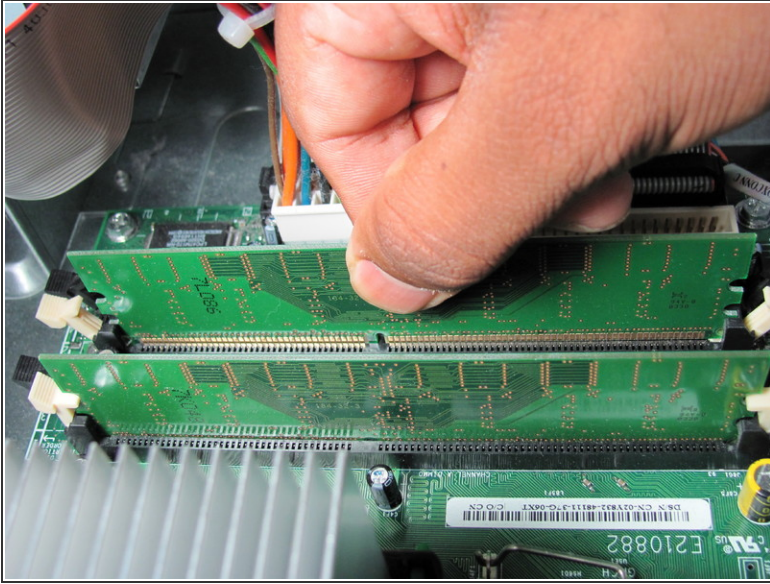

- Grasp the RAM module and firmly pull upwards until it is released from its slot.
- Repeat this step for each RAM module.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 04:48:06 AM.